

## SERVICE INTERVALS

- Gear box oil change at 500 km, then all 8000km (Competition use with reduced intervals)
- Ignition plug control every 1000 km and change every 3000 km ((In competition use when necessary)
- Piston with rings, Connection rod- and crankshaft bearing control all 4000 km (Competition use with reduced intervals)
- Piston change at the latest of 12000 km (Competition use with reduced intervals)
- Oil & coal deposits of the exhaust control have to be checked and cleaned all 4000 km (Competition use with reduced intervals)

